


MODEL : PAC200

SPARE PARTS LIST

PART NO. : PM-0111

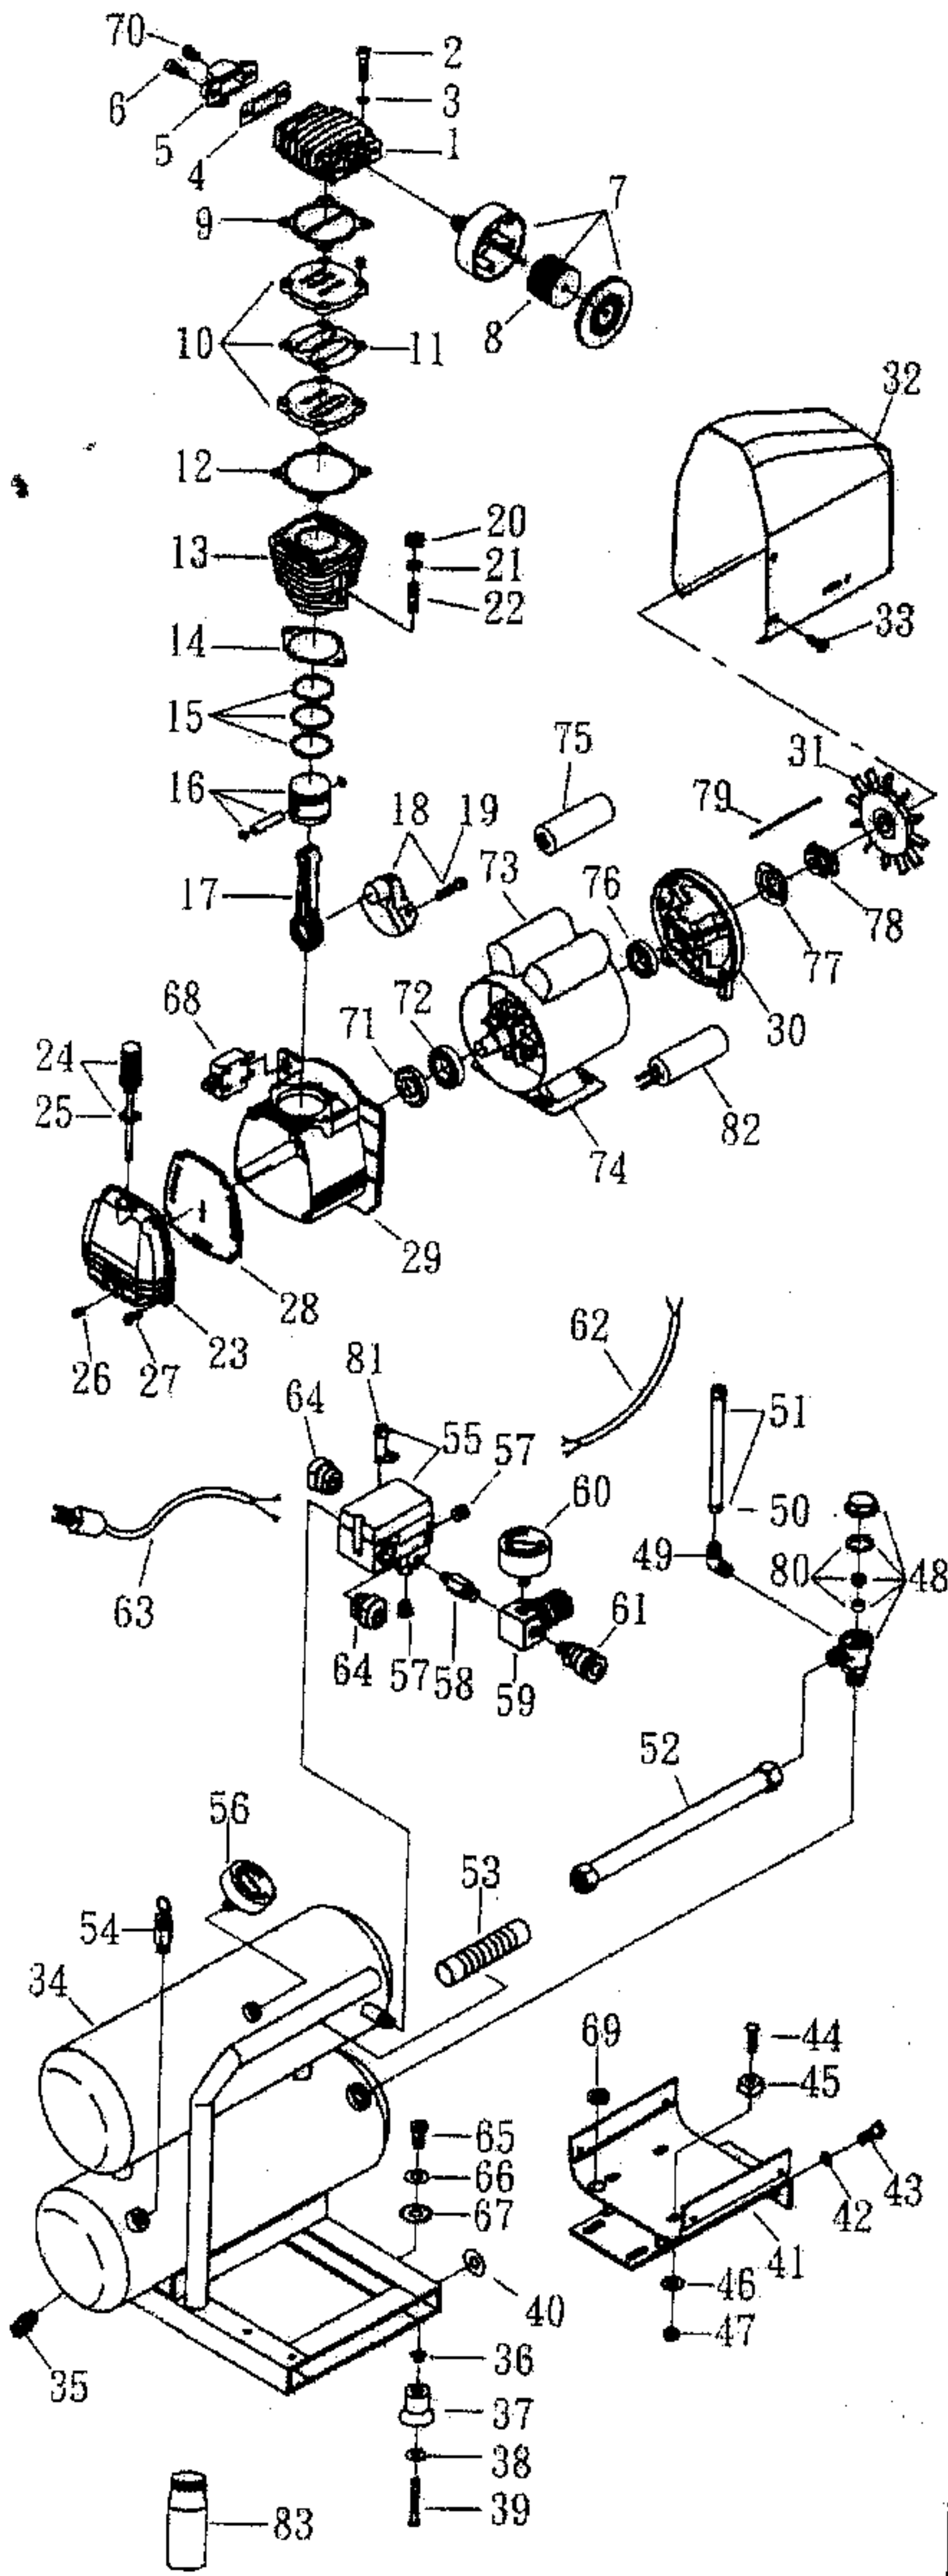

REF. NO.	DESCRIPTION	PART NO.	QTY.
1	Cylinder head	PACP1	1
2	Hexagon socket set bolt	PACP2	4
3	Spring washer	PACP3	4
4	Elbow packing	PACP4	1
5	Exhaust elbow	PACP81	1
6	Hexagon socket set bolt	PACP6	1
7	Air filter set	PACP7	1
8	Filter sieve	PACP8	1
9	Cylinder head packing	PACP9	1
10	In. & Ex. valve assembly	PACP82	1
11	In. & Ex. valve seat packing	PACP83	1
12	Valve seat packing	PACP12	1
13	Cylinder	PACP13	1
14	Cylinder packing	PACP14	1
15	Piston ring set	PACP15	1
16	Piston set	PACP16	1
17	Rod	PACP17	1
18	Crankshaft	PACP18	1
19	Hexagon socket set bolt	PACP19	1
20	Hexagon nut	PACP20	2
21	Spring washer	PACP21	2
22	Double head screw	PACP22	2
23	Front cover	PACP23	1
24	Air flue oil filling assembly	PACP24	1
25	Oil filling assembly packing	PACP25	1
26	plug bolt	PACP26	1
27	Round head bolt (+)	PACP27	4
28	Front cover packing	PACP28	1
29	Crankcase	PACP84	1
30	Motor rear cover	PACP85	1
31	Radiation fan	PACP31	1
32	Motor cover	PACP32	1
33	Round head bolt (+)	PACP33	6
34	Air tank	PACP34	1
35	Drain valve	PACP35	1
36	Grommet	PACP36	4
37	Tank feet rubber packing	PACP37	4
38	Plate washer	PACP38	4
39	Round head bolt (+)	PACP39	4
40	Body seat block	PACP40	4
41	Tank seating	PACP41	1
42	Spring washer	PACP21	4
43	Hexagon head bolt	PACP42	4
44	Motor feet set bolt	PACP43	4
45	Motor seat block	PACP44	4
46	Plate washer	PACP45	4
47	U-nut	PACP46	4
48	Check valve	PACP47	1
49	Unloading elbow	PACP48	1
50	Unloading tube nut	PACP49	1
51	Unloading tube	PACP50	1
52	Exhaust soft tube	PACP51	1
53	Rubber handle	PACP52	1
54	Safety relief valve	PACP53	1
55	Pressure switch	PACP54	1
56	Pressure gauge	PACP55	1
57	Plug	PACP56	2
58	Nipple	PACP57	1
59	Adjust pressure valve	PACP58	1
60	Pressure gauge	PACP59	1
61	Quick joint (Female)	PACP60	1
62	Cable wire	PACP61	1
63	Power wire	PACP62	1
64	Strain relief bushing	PACP63	2
65	Round head bolt (+)	PACP64	1
66	Brass washer	PACP65	2
67	Gear-shape washer	PACP66	2
68	Circuit protector	PACP67	1
69	Bushing	PACP68	1
70	Outlet valve	PACP86	1
71	Oil seal	PACP70	1
72	Front bearing	PACP87	1
73	Capacitor cover	PACP72	2
74	Motor (29, 30, 68, 71, 72, 73, 75, 76, 77, 78, 79, 82)	PACP88	1
75	Starting capacitor	PACP89	1
76	Rear bearing	PACP75	1
77	Platinum plate	PACP90	1
78	Centrifugal switch	PACP91	1
79	Hexagon head bolt	PACP78	1
80	Check valve kit	PACP79	4
81	Relief valve	PACP80	1
82	Running capacitor	PACP92	1
83	Air compressor oil	PACP69	1